


Single-Frequency Fiber Laser 1530nm - 1572nm



*This product is sold
and supported
in the USA by*

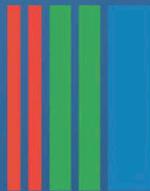

LASER LAB SOURCE
marketplace for **Scientists & Engineers**

contact@LaserLabSource.com

800.887.5065

CKSF-D-ER-M Single Frequency Fiber Laser Module



Description:

Techwin CKSF-D is a low-noise Single Frequency Fiber Laser based on Distributed Feedback Bragg Grating (DFB) technology. It has independent intellectual property rights and achieves a stable single-frequency laser output with single longitudinal mode, linear polarization, and narrow linewidth. CKSF-D has very low phase and frequency noise and low relative intensity noise (RIN). Techwin uses unique packaging technology to ensure low-noise DFB single frequency fiber lasers with excellent wavelength stability.

Techwin uses extra-cavity technology to significantly suppress the relative intensity noise (RIN) of the DFB single frequency fiber laser, ensuring that the resonant cavity of the single frequency fiber laser is not disturbed. Please refer to CKSF-D-RS series products.

CKSF-D narrow linewidth single frequency fiber laser module has a small size, a sturdy package, strong resistance to environmental interference, output power is up to 100mW. CKSF-D-ER-M is based on erbium-doped fiber with ultra-narrow linewidth (<1kHz) and low phase noise and frequency noise. The standard wavelength is 1550.12nm, and the optional wavelength range is 1530-1570nm, such as the standard wavelength under the ITU framework. Other wavelengths can be customized according to requirements.

Features:

- Ultra-narrow linewidth <1kHz
- Very low phase noise and frequency noise
- Low relative intensity noise (RIN)
- Stable single frequency, single polarization output
- No mode-hopping
- Small sized package 145x100x25mm
- High reliability

Applications:

- Distributed optical fiber sensing
- Coherent LiDAR
- Fiber optic hydrophone
- Laser spectroscopy
- Coherent communication
- Gas absorption measurement
- Cold atomic physics
- Other scientific research

Specifications:

Parameter	Unit	Specification		
		Min	Typ.	Max
Part no.		CKSF-D-ER-M		
Center wavelength	nm	1530-1572nm fixed, other specify		
Output power	mW	5	-	100
Laser output		CW, Single frequency & Single longitudinal mode		
Beam quality	M ²	-	1.05	1.1
Linewidth	kHz	-	-	1
RIN peak frequency	kHz	300	400	500
RIN peak	dBc/Hz	-	-105	-
RIN @10MHz	dBc/Hz	-	-140	-
Phase noise (1m OPD)	urad/√Hz	70@100Hz		
	urad/√Hz	7@10kHz		
	urad/√Hz	0.7@100kHz		
SMSR (50pm resolution)	dB	60	>70	-
Output polarization		Linear		
Polarization extinction ratio (PER)	dB	20	23	-
Output power stability	%	-	0.5	1
Output isolation	dB	50	-	-
Wavelength thermal tuning	nm	0.6	0.8	1.0
PZT wavelength modulation		Optional		
Modulation frequency (linear)	kHz	DC	10	20
Modulation wavelength range	GHz	-	>8	>10
Operating temperature	°C	0	-	60
Storage temperature	°C	-40	-	85
Power supply	V _{DC}	12		
Communication interface		RS485		
Output fiber type		Panda PM1550		
Output fiber length	m	> 0.5		
Optical connector		FC/APC		
Dimension	mm	145x100x25		
Weight	kg	<0.5		


Ordering Information:

CKSF-D-ER-M-<15xx>-<PW>-PMF/SMF-PZT-FA


PW: Output power, 5- 20mW is fixed, 50mW and 100mW output power are adjustable

Options: 1. SMF output 2. Monitoring output 3. PZT fast modulation


Typical Spectrum:

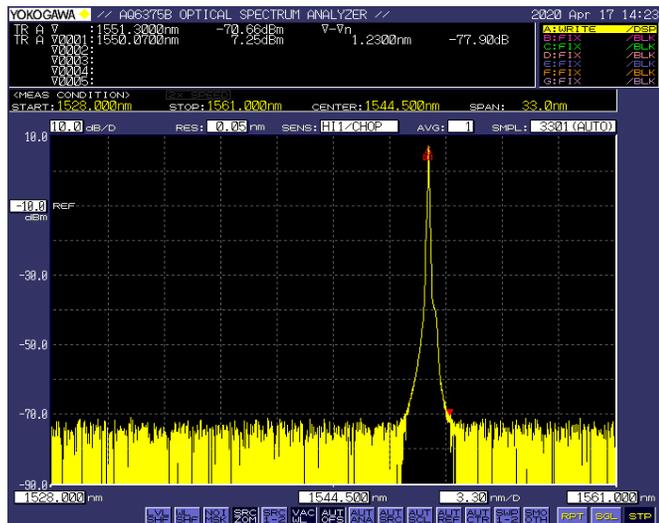


Linewidth:

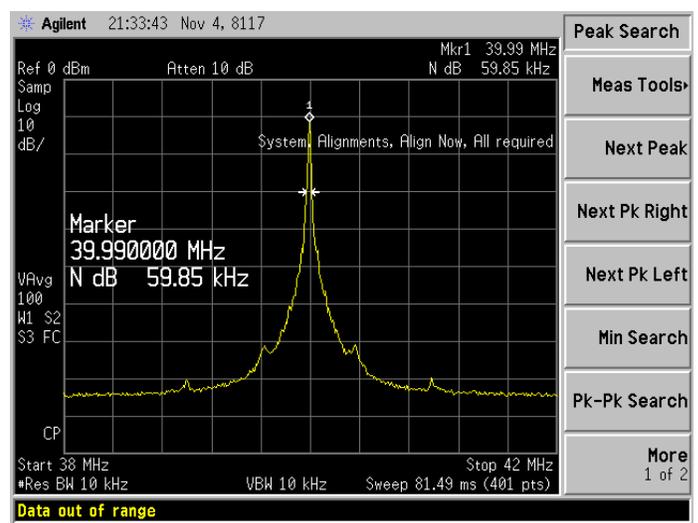

Phase Noise & Frequency Noise:

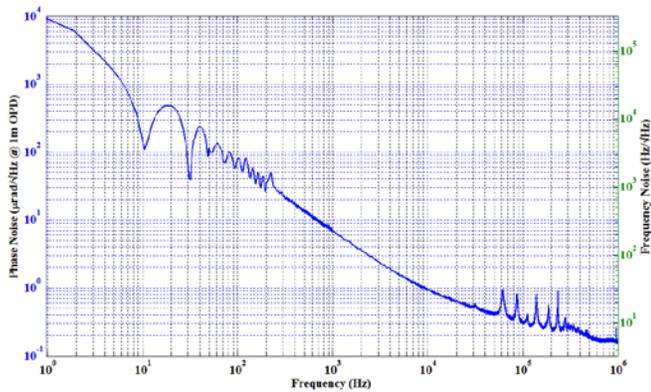

Relative Intensity Noise (RIN):

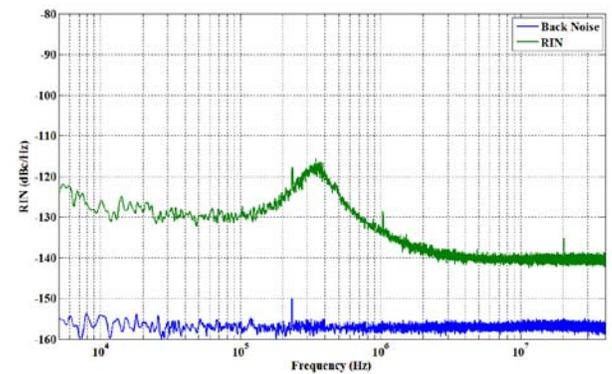

Technical Notes:

1. Typical CKSF-D-ER-M spectrum SMSR>75dB. OSNR is much higher.
2. The linewidth of CKSF-D-ER-M can not be obtained directly from the beat spectrum of linewidth test based on unbalanced M-Z interferometer, which is limited by the resolution of the test platform. Its integral time is 240us.
3. The linewidth of CKSF-D-ER-M is calculated based on the power spectral density of frequency fluctuation.
4. Typical RIN test results do not include RIN suppression technology. For lower RIN level, please refer to CKSF-D-RS-ER-M.
5. The phase noise and frequency noise tests are based on the normal conditions of the laboratory room temperature, and no sound insulation, vibration isolation and other measures are taken.