

# YLPN-1-4x200-30-M

## Adjustable Pulse Duration Fiber Laser

**NEW PRODUCT**



**Applications**

- ▶ Precision Marking
- ▶ Trimming
- ▶ Coating removal
- ▶ Scribing
- ▶ Surface Treatment
- ▶ Texturing
- ▶ Cutting

**Features**

- ▶ Pulse Energy up to 1 mJ
- ▶ Average Power up to 30 W
- ▶ Pulse Repetition Rates 2-1000 kHz
- ▶ Over 20% Wall-plug Efficiency
- ▶ Instant Modulation Response
- ▶ Excellent Pointing Stability
- ▶ Maintenance-free Operation
- ▶ Full Flexibility in Operating Parameters

**IPG Photonics' YLPN -1000-4x200-30-M** nanosecond ytterbium fiber laser provides peak power of 15 kW with scalable average output power up to 30 W, adjustable pulse waveforms in the range of 4-200 ns. The laser is triggered externally in a wide range of pulse repetition rates 2-1000 kHz, offers pulse energy of up to 1 mJ and the ability to scale average power independent of the energy. An output isolator ensures high output power stability and allows to process highly reflective materials.


IPG's YLPN laser is a small air-cooled maintenance-free module designed for OEM applications. The robust all fiber design packaged into a rugged case allows operation in harsh industrial environments. The all fiber format allows for the adjustment of peak power and/or pulse repetition rate without affecting any of the output beam parameters. This fiber laser is much more efficient and compact than conventional lasers on the market. Fine processing of thin foils and coating as well as treatment of surfaces is easy to adjust using wide range of operating parameters. It is ideal for applications in micromachining, scribing, texturing, ablation, the solar/ photovoltaic arena, hole drilling, resistor trimming and marking.

# YLPN-1-4x200-30-M

## Adjustable Pulse Duration Fiber Laser


Optical Characteristics	
Wavelength, nm	1064
Average Power, W	30
Pulse Energy, mJ	1
Pulse Duration, ns	4-200
Peak Power, kW	15
Repetition Rate, kHz	2-1000
Beam Quality, M <sup>2</sup>	1.5

General Characteristics	
Module Dimensions, mm	292 x 59 x 233
Optical Head Dimensions (L x diam), mm	247 x 46
Cooling	Air-cooled
Supply Voltage, VDC	24
Power Consumption, W	typ. 120

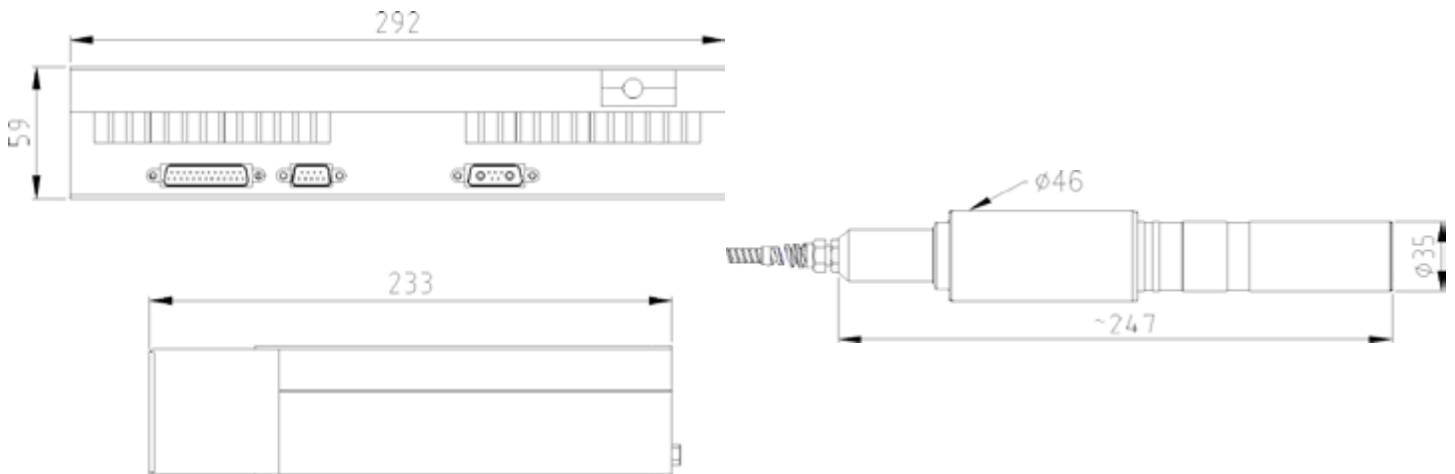

+1 (508) 373-1100  
 sales.us@ipgphotonics.com  
[www.ipgphotonics.com](http://www.ipgphotonics.com)

**Legal notices:** All product information is believed to be accurate and is subject to change without notice. Information contained herein shall legally bind IPG only if it is specifically incorporated into the terms and conditions of a sales agreement. Some specific combinations of options may not be available. The user assumes all risks and liability whatsoever in connection with use of a product or its application. IPG, IPG Photonics, The Power to Transform and IPG Photonics' logo are trademarks of IPG Photonics Corporation. © 2014 IPG Photonics Corporation. All rights reserved.

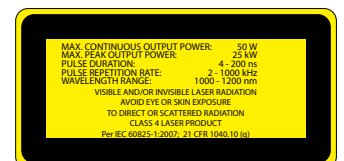

**The Power to Transform®**